

Vaisala HUMICAP® Humidity and Temperature Probe HMP110



The HMP110 with excellent stability and high chemical tolerance.

Features/Benefits

- Miniature-size humidity transmitter
- Low power consumption and fast startup for battery powered applications
- Measurement range: 0 ... 100 %RH; -40 ... +80°C
- Cable detachable with standard M8 quick connector
- Reliable: Latest generation HUMICAP® 180R sensor for best stability and high chemical tolerance. IP65 metal housing.
- Optional RS485 digital output
- Traceable: Comes with calibration certificate. $\pm 1.7\%$ RH measurement accuracy (0 ... 90%RH)
- HMP110R replacement probe service available for easy maintenance
- Optional dew point calculation

HMP110

The HMP110 is a trouble-free and cost-effective humidity transmitter with high accuracy and good stability. It is suitable for volume applications or integration into other manufacturers' equipment. The HMP110 is also suitable for glove boxes, greenhouses, fermentation and stability chambers, data loggers, and incubators.

Easy Installation

The probe cable has a screw-on quick connector for easy installation. Different cable lengths and accessories are available.

Low Current Consumption

HMP110 is suitable for battery-powered applications because of its very low current consumption. It also has a fast start-up time.

Several Outputs

The temperature measurement is a standard feature, dew point measurement is optional. Three standard voltage outputs are available.

Robust Design

The stainless steel body of the HMP110 is classified as IP65. Thus, it survives rough conditions. The HMP110 has high chemical tolerance because of the HUMICAP® 180R sensor.

Easy Maintenance

Maintaining measurement traceability is easy using the HMP110R replacement probe. We send you a replacement probe, you detach the old probe and send it back to us. In this way the measurement is available at all times without interruptions.

Technical Data

Performance

RELATIVE HUMIDITY	
Measurement range	0 ... 100 %RH
Accuracy (incl. non-linearity, hysteresis and repeatability)	
temperature range	0 ... +40 °C
0 ... 90 %RH	±1.7 %RH
90 ... 100 %RH	±2.5 %RH
temperature range	-40 ... 0 °C, +40 ... +80 °C
0 ... 90 %RH	±3.0 %RH
90 ... 100 %RH	±4.0 %RH
Factory calibration uncertainty (+20 °C)	± 1.5 %RH
Humidity sensor	Vaisala HUMICAP® 180R
Stability	±2 %RH over 2 years
TEMPERATURE	
Measurement range	-40 ... +80 °C
Accuracy over temperature range	
0 ... +40 °C,	±0.2 °C
-40 ... 0 °C, +40 ... +80 °C	±0.4 °C
Temperature sensor	Pt1000 RTD 1/3, Class B IEC 751
DEW POINT	
Measurement range	-40 ... +80 °C
Accuracy (incl. non-linearity, hysteresis and repeatability)	
temperature range	0 ... +40 °C
when dew point depression < 15 °C	±1 °C
when dew point depression 15 ... 25 °C	±2 °C
temperature range	-40 ... 0 °C, +40 ... +80 °C
when dew point depression < 15 °C - dew point depression = ambient temperature - dew point	±2 °C

Inputs and Outputs

Operating voltage	5 ... 28 VDC / 8 ... 28 VDC with
(Use lowest available operating voltage to minimize heating)	5 V output
	8 ... 28 VDC with loop power converter
Current consumption	1 mA average, max. peak 5 mA
Start-up time	
probes with analog output	4 s at operating voltage
	13.5 ... 16.5 VDC
	2 s at other valid operating voltages
probes with digital output	1 s
Outputs	
2 channels	0 ... 1 VDC / 0 ... 2.5 VDC / 0 ... 5 VDC / 1 ... 5 VDC
1-channel loop-power converter (separate module, compatible with humidity accuracy only)	4 ... 20 mA
digital output (optional)	RS485 2-wire half duplex

External loads	
0 ... 1 V	R_L min 10 k Ω
0 ... 2.5 V / 0 ... 5 V	R_L min 50 k Ω

Operating Environment

Operating temperature range	-40 ... +80 °C
Electromagnetic compatibility	EN 61326-1: Electrical equipment for measurement, control and laboratory use – EMC requirements – for use in industrial locations.

Mechanics


Materials	
body	stainless steel (AISI 316)
grid filter	chrome coated ABS plastic
cable	polyurethane or FEP
Housing classification	IP65
Body thread	M12x1 / 10 mm
Cable connector	4-pin M8 (IEC 60947-5-2)
Weight	
probe	17 g
probe with 0.3 m cable	28 g

Options and Accessories

Sensor protection	
plastic grid	DRW010522
membrane filter	DRW010525
stainless steel sintered filter	HM46670SP
4 ... 20 mA loop power converter	UI-CONVERTER-1
Mounting bracket for converter	225979
Plastic M12 installation nuts, pair	18350SP
USB cable for PC connection	219690
Probe mounting clamp set, 10 pcs	226067
Probe mounting flange	226061
Connection cables	
standard 0.3 m	HMP50Z032SP
standard 3 m	HMP50Z300SP
80 °C 1.5 m	225777SP
80 °C 3 m	225229SP
180 °C 3 m FEP	226902SP

Dimensions

Dimensions in mm (inches)

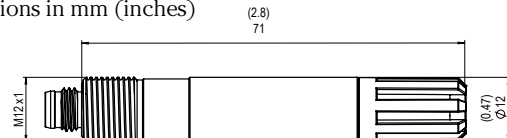

VAISALA

For more information, visit www.vaisala.com or contact us at sales@vaisala.com

Ref. B210852EN-B ©Vaisala 2011

This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications – technical included – are subject to change without notice.

