


## Vaisala Ozone Interface Kit RSA922

- **Built around Vaisala Digital Interface OIF92**
- **Four-channel digital interface for connecting digital Vaisala Radiosonde RS92 models to Brewer-Mast type ozone sensor for ozone sounding**
- **Enables accurate measurements, sharp vertical resolution and a fast sampling rate**
- **Can be used for 1-2 other sensor measurements within specified ranges**

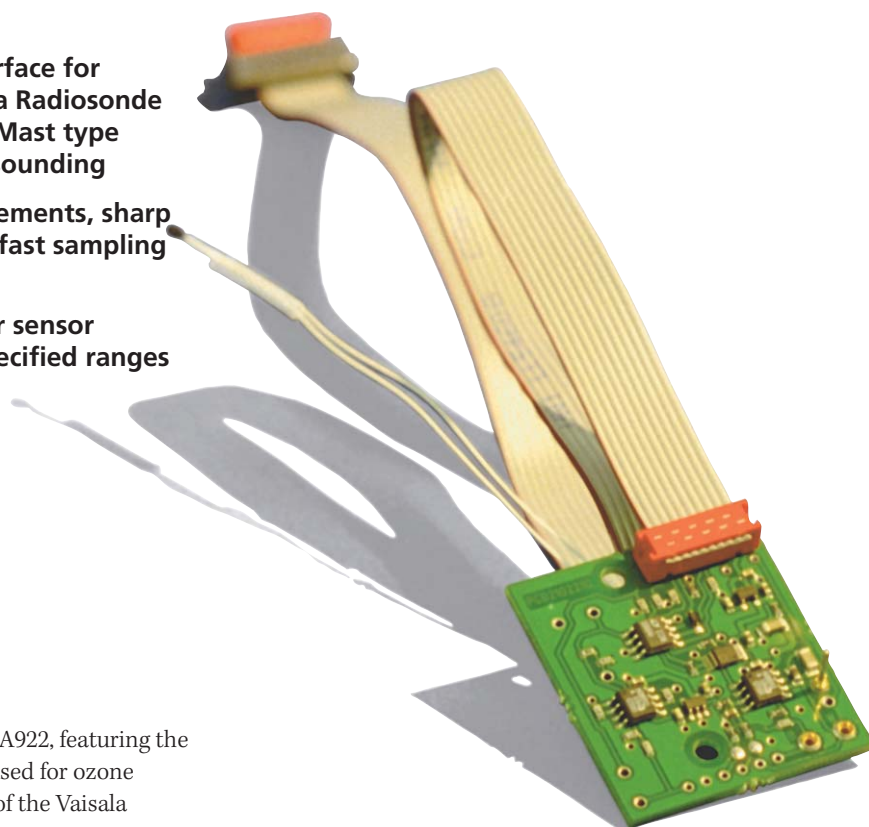

The Vaisala Ozone Interface Kit RSA922, featuring the Vaisala Digital Interface OIF92, is used for ozone sounding with the digital versions of the Vaisala Radiosonde RS92 and the MAST corporation 730-10 Brewer-Mast type ozone sensor. The OIF92 is powered by the radiosonde battery and has four channels. Two channels are dedicated to the ozone sensor current and temperature. Two channels are dedicated to voltage measurement for other purposes.

With the OIF92, the Brewer-Mast ozone sensor and a digital RS92 radiosonde it is possible to measure humidity, pressure, temperature and geopotential height while measuring the vertical distribution of atmospheric ozone. Winds in the upper atmosphere are detected using GPS navigation signals.

### **GROUND EQUIPMENT**

The OIF92 and digital RS92 radiosondes are used with the Vaisala DigiCORA<sup>®</sup> Sounding System MW21 and Vaisala Sounding Processor PP21. The ozone data is stored to file for further processing by the user. It is easy to perform simulations and post-ascent processing with the METGRAPH module of the DigiCORA<sup>®</sup> Sounding Software. System maintenance can be performed by Vaisala under the terms of a Vaisala Service Contract. Economical leasing and rental agreements are available for the Vaisala DigiCORA<sup>®</sup> Sounding System MW21 and Vaisala Sounding Processor PP21.

## TECHNICAL INFORMATION

OZONE INTERFACE	INTERFACE KIT	FOR USE WITH...
OIF92 digital interface	RSA922	MAST Corporation 730-10 ozone sensor (Brewer-Mast type)
Dimensions	40 (l) x 35 (w) mm	
Cable length	380 mm	
Weight with cable	Max. 20 g	
Number of analog input channels	4	
Analog-to-digital converter resolution	16-bit	
Measurement temperature range for all channels	-5 ... +60 °C	
Operating temperature range for all channels	- 40 ... +85 °C	
Sampling rate for all channels	Dependent upon the radiosonde: e.g. once per second with the RS92-SGP	
Synchronization	All channels are measured in synchronization with the meteorological measurements (pressure, temperature, humidity, wind)	
Ozone current measurement range	0 ... 20 µA	
Ozone current measurement uncertainty *)	0.05% of the reading, minimum 1 nA e.g. for 5 µA measurement the accuracy is 2.5 nA; for 10 µA measurement the accuracy is 5 nA; and for 20 µA measurement the accuracy is 10 nA	

Resolution	1 nA (LSB = 0.35 nA)
Typical noise	1 nA (standard deviation)
Ozone temperature measurement range	-5 ... +60 °C
Temperature measurement uncertainty*)	±0.2 °C
Temperature resolution	0.01 °C
Typical noise	0.015 °C (standard deviation)
Voltage measurement range (both voltage channels)	0 .. 8 V
Voltage measurement uncertainty*)	0.1% of the reading, minimum 1 mV
Resolution	1 mV (LSB = 0.13 mV)
Typical noise	0.5 mV (standard deviation)
Input resistance	20 kΩ
Driving potential for sensor bias is optional (used for MAST corporation 730-10 ozone sensor)	0.41V (If used, the other voltage channel is reserved for this purpose)
Driving potential adjustment range	±20%
Driving potential stability	±1%
Power consumption	< 3 mA (from radiosonde battery)

\* 2-sigma (k=2) confidence level (95.5%)



**Vaisala Oyj**  
Helsinki, Finland  
Tel. +358 9 894 91  
Fax +358 9 894 92227

**Vaisala SA**  
Paris, France  
Tel. +33 1 3057 2728  
Fax +33 1 3096 0858

**Vaisala GmbH**  
Hamburg, Germany  
Tel. +49 40 839 030  
Fax +49 40 839 03 110

**Vaisala SA**  
Meyreuil, France  
(Thunderstorm Systems only)  
Tel. +33 4 4212 6464  
Fax +33 4 4212 6474

**Vaisala Ltd**  
Birmingham, UK  
(Road Weather Products only)  
Tel. +44 121 683 1200  
Fax +44 121 683 1299

**Vaisala Inc.**  
Woburn, MA, USA  
Tel. +1 781 933 4500  
Fax +1 781 933 8029

**Vaisala Ltd**  
Newmarket, UK  
(Upper Air and Surface Weather Products only)  
Tel. +44 1638 576 200  
Fax +44 1638 576 240

**Vaisala Inc.**  
Columbus, OH, USA  
(Aviation Weather Systems only)  
Tel. +1 614 873 6880  
Fax +1 614 873 6890

**Vaisala Inc.**  
Boulder, CO, USA  
Tel. +1 303 499 1701  
Fax +1 303 499 1767

**Vaisala Inc.**  
Tucson, AZ, USA  
(Thunderstorm Systems and Data only)  
Tel. +1 520 806 7300  
Fax +1 520 741 2848

**Vaisala Inc.**  
Sunnyvale, CA, USA  
(Surface Weather Products only)  
Tel. +1 408 734 9640  
Fax +1 408 734 0655

**Vaisala Inc. Regional Office**  
London, ON, Canada  
Tel. +1 519 679 9563  
Fax +1 519 679 9992

**Vaisala KK**  
Tokyo, Japan  
Tel. +81 3 3266 9611  
Fax +81 3 3266 9610

**Vaisala Pty Ltd**  
Hawthorn, Vic., Australia  
Tel. +61 3 9818 4200  
Fax +61 3 9818 4522

**Vaisala Beijing**  
Representative Office  
P.R.China  
Tel. +86 10 8526 1199  
Fax +86 10 8526 1155

**Vaisala Regional Office Malaysia**  
Kuala Lumpur, Malaysia  
Tel. +60 3 2169 7776  
Fax +60 3 2169 7775

For more detailed contact information and for other Vaisala locations visit us at: [www.vaisala.com](http://www.vaisala.com)

All specifications subject to change without notice.

Ref. B210437EN-A

