
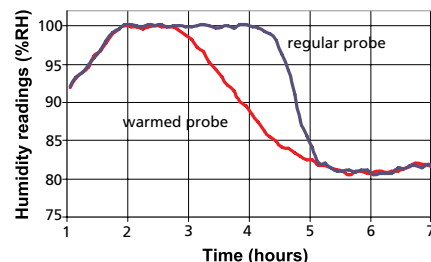


HMT330MIK Meteorological Installation Kit

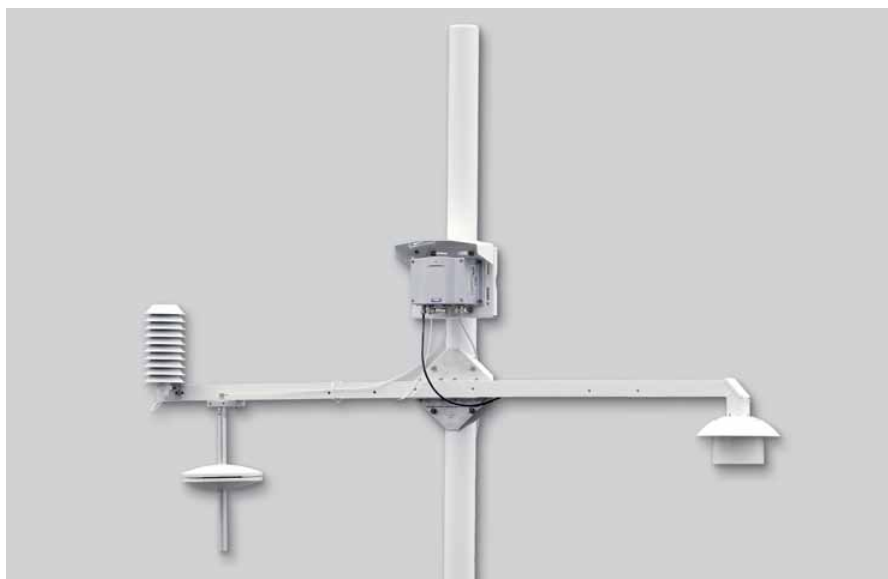

After a period of 100 % relative humidity, the warmed probe measures the true humidity, whereas the non-warmed probe takes time to recover from the condensation.

and the transmitter calculates the relative humidity from the dew point and temperature values.

Open Shield Prevents Microclimates

The warmed probe of the HMT337/PTU307 is mounted in a shield which is open at the bottom to ensure steady air circulation to the sensor even in calm weather.

In traditional radiation shields sleet or snow can accumulate on the shield and prevent the proper air circulation through the shield, and create a humid microclimate until the snow melts.

Essential for Critical Weather Measurements

Obtaining a true humidity reading is particularly important e.g. in traffic safety: at airports and at sea as well as on the roads. It is essential, for example, in fog and frost prediction.



For calibration, a portable HMP77 reference probe is easy to attach beside the HMT337 or PTU307 probe.

Features/Benefits

- For outdoor humidity and temperature measurements
- Can be ordered in a variety of configurations
- Used together with HMT337 transmitter or PTU307
- Vaisala SPH 10/20 Static Pressure Head eliminates effectively pressure variations in the barometer caused by wind

HMT337/PTU307 Features

- Warmed probe provides true humidity readings in condensing conditions
- Humidity measurement expressed as relative humidity and/or dew point temperature
- Easy field calibration with the HM70 hand-held meter

The Vaisala Meteorological Installation Kit HMT330MIK enables the Vaisala HUMICAP® Humidity and Temperature Transmitter HMT337 to be installed outdoors to obtain reliable measurements for meteorological purposes.

True Humidity Readings in Condensing Conditions


In weather observations dew formation makes reliable humidity measurement difficult. When dew has formed on the humidity sensor, it is impossible to obtain a true reading until this dew evaporates.

Both the PTU307 and HMT337 avoid this problem by warming the probe. When warmed, the relative humidity inside the probe stays below the ambient level. With an accurate temperature measurement, the ambient dew point can be calculated precisely. To obtain the ambient relative humidity, an additional probe measures the ambient temperature,

Technical Data

Dimensions

Dimensions in mm (inches)

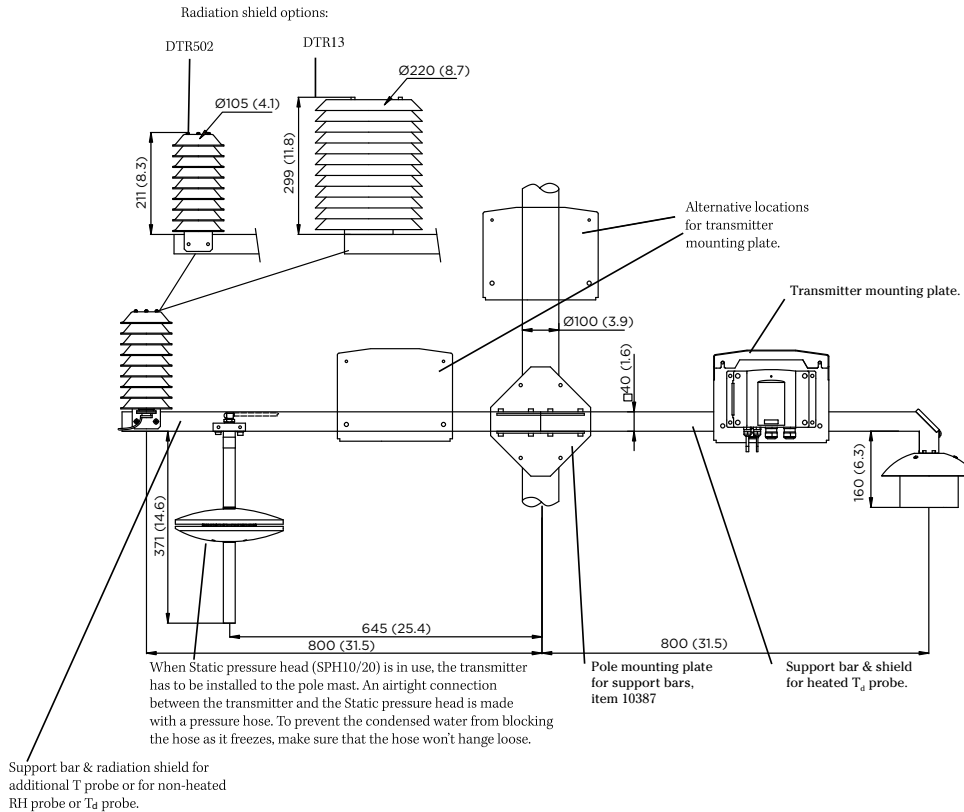

Order form

Vaisala Meteorological Installation Kit		HMT330MIK	1	2	3	4	5	PRICE
1	Support bar & shield for warmed T _d probe	No support bar & shield for warmed T _d probe Support bar & shield for warmed T _d probe	0 1					
2	Support bar and radiation shield for additional T probe or for non-warmed RH or T _d probe	No support bar or radiation shield Support bar with DTR502 shield for T probe Support bar with DTR13 shield for T probe Support bar with DTR502 shield for non-warmed RH or T _d probe Support bar with DTR13 shield for non-warmed RH or T _d probe		A B C D E				
3	Support bar mounting plate	No mounting plate Pole mounting plate for support bar/bars (item 10387)	0 1					
4	Additional transmitter mounting plate (incl. rain shield)	No additional transmitter mounting plate Transmitter mounting plate for support bar assembly Transmitter mounting plate for pole assembly		A B C				
5	Static Pressure Head	No Static Pressure Head Static Pressure Head SPH10 Only for the PTU300					0 1	
							TOTAL	
							QTY	
							TOTAL VALUE	

HUMICAP® is a registered trademark of Vaisala.

VAISALA

www.vaisala.com

Please contact us at
www.vaisala.com/requestinfo



Scan the code for more information

Ref. B210944EN-D ©Vaisala 2012
 This material is subject to copyright protection, with all copyrights retained by Vaisala and its individual partners. All rights reserved. Any logos and/or product names are trademarks of Vaisala or its individual partners. The reproduction, transfer, distribution or storage of information contained in this brochure in any form without the prior written consent of Vaisala is strictly prohibited. All specifications — technical included — are subject to change without notice.

